
R⊕\S Imao




★Key Point -

Provide high support capacity even with small body.

| Body | Piston / Locking Shaft | Cylinder |
|----------------|---------------------------|----------------|
| A5052 aluminum | S45C steel | A5056 aluminum |
| Anodized | Electroless nickel plated | Anodized |

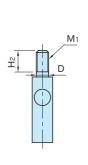

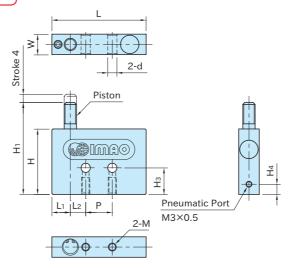

| Part Number | Н | H ₁ | M 1 | H ₂ | D | L | W | d | М | L ₁ |
|-------------|----|----------------|------------|----------------|---|----|----|-----|----------------|----------------|
| AMNS06-S | 25 | 33 | M4×0.7 | 7 | 4 | 36 | 8 | 3.4 | M3×0.5 Depth 6 | 7 |
| AMNS08-S | 32 | 44 | M6×1 | 10.5 | 6 | 46 | 10 | 4.5 | M4×0.7 Depth 8 | 9 |

| Part Number | L ₂ | Р | Нз | H ₄ | Operating Air Pressure (MPa) | Support Capacity(N) | Piston Spring Force (N) | Weight (g) |
|-------------|----------------|----|----|----------------|---------------------------------|------------------------|----------------------------|------------|
| AMNS06-S | 6 | 10 | 10 | 3 | 0.3~0.7 | 15~40 | 0.2~0.3 | 22 |
| AMNS08-S | 7.5 | 13 | 13 | 5 | 0.3~0.7 | 30~70 | 0.3~0.4 | 49 |

Feature

- •The piston can be locked/unlocked by air operation.
- •This compact work support can be used as a support in surface mounter.


How To Use

■Operating Instructions

- 1. Load a workpiece on the support.
- 2. The piston strokes to fit the workpiece by the inner spring.
- 3. Clamp the workpiece.
- 4. Apply air to the pneumatic port.
- 5. The piston is locked.
- 6. The piston is unlocked when the air is released.

■Installation Instructions

Side or bottom surface mounting is possible.

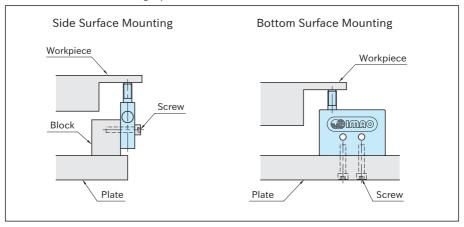

70 60 AMNS08-S 60 20 10 0 0.3 0.4 0.5 0.6 0.7 Operating Air Pressure (MPa)

Note

Use a nut to attach a tip on the piston as directed below.

The piston rotates 360° freely.

